


TNW | S30 Max

Instruction For Use





Description

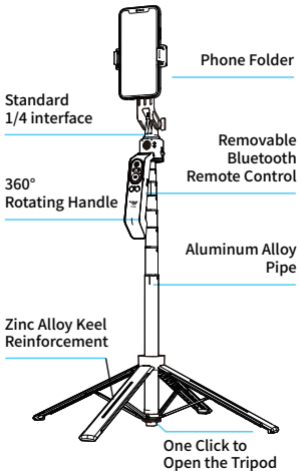

Remote Control Operation

Connect to Bluetooth:

Long press the on/off button. The LED indicator will flash blue, indicating that the device is turned on. Then turn on your phone's bluetooth, search for the device named "TNW-S30 Max", and tap to pair. The display will confirm the connection.

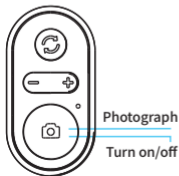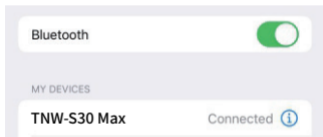

This product uses a Type-c charging interface and has a charging range (approximately 5000 operations after fully charging)



Type-C
Charging Port

Remote Control Operation

1. Power on: Press and hold the camera button for 3 seconds to power on. The indicator light will flash, indicating that the device is in search mode.
3. Take a photo: When the remote control is connected to the phone, press the photo button. The indicator light will flash, and a photo will be taken.
4. Sleep mode: If the device is turned on and connected via Bluetooth but remains inactive for 5 minutes, it will enter a low-power sleep mode and can be awakened by pressing any button. After 10 minutes of inactivity, it will disconnect from Bluetooth and shut down automatically.
5. Shutdown: In both power-on and sleep modes, press and hold the camera button for 3 seconds. The indicator light will flash and then turn off.
6. Restart: After restarting, Bluetooth will automatically reconnect and function as normal.
7. Charging: The red light remains on while charging and turns off when fully charged. The charging current is 100 mA.

Product Parameters


Solution for Remote Control Failing to Connect to a Mobile Phone

1. Turn on your phone's Bluetooth and clear some paired devices if necessary.
2. Turn off the mobile phone and restart it.
3. Turn off the bluetooth remote control and restart it.
4. Turn on your phone's bluetooth and try to connect again.
5. Turn on the Bluetooth remote control and search for "TNW-S30 Max" on your phone. Click Connect. When the interface shows "Connecting/Pairing," quickly and repeatedly press the remote control button until the connection is successful.
6. Activation is only required during the first connection. After that, the device will connect automatically and work normally.


Solution to the problems on some Android phones where pressing the remote control does not shoot, but will increase the volume/adjust the focus/or no response.

1. Open the camera and enter photo mode.
2. Swipe left or go to Camera Settings.
3. Select Volume button function.
4. Set the volume button function to Shutter (do not select Zoom or Focus).
5. The setting path may vary depending on the phone model. Please locate the option according to your device's interface.

How to Clip a Phone

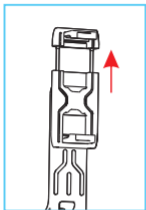

The direction of the small chuck is upward

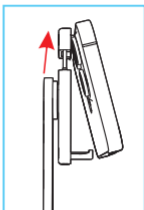


Use your phone to push it out and clamp it in

Attention: Do not use both hands to directly pull the chuck


Removing the Remote Control

Slide Up to Remove the Remote Control

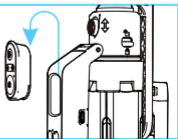


Clip Odd Rotation

Flip freely horizontally and vertically, take photos realizing multi angle shooting

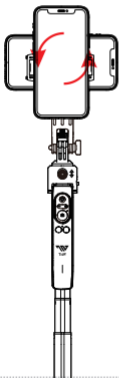


How to Open the Quadraped

Press "PUSH" at the bottom of the tripod button to open

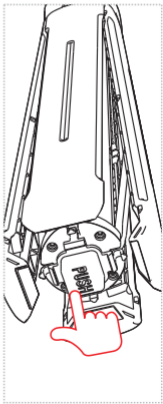


Quadruped Mode

Four legged landing for more stability

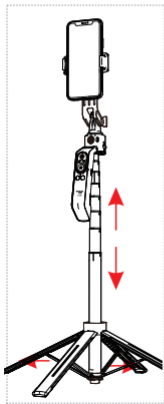

360° PTZ Panorama

Smoothy panoramic photographing experience

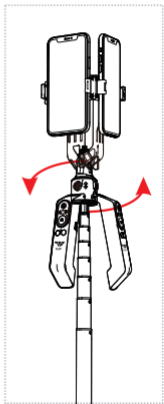

Product Parameters

Color: black and white

Clip phone size: 6.5-10cm

Remote Control Parameters

Applicable system: compatible with iOS /Android/Hongmeng

Bluetooth name: TNW-S30 Max

Remote control distance: 10 meters (30 inches)

Battery: Polymer battery (150mAh)

Charging current: 100mA

Charging interface: Type-C

Transmission frequency: 2.401GHZ-2.480GHZ

Adapter charging voltage/current 5V/1-3A



MADE IN CHINA